

PCG-GRX510/GRX510K/GRX510P/GRX550/GRX550K/GRX550P/ PCG-GRX570/GRX570K/GRX570P/GRX590/GRX590K/RX590P

SERVICE MANUAL

Ver 2-2002D

Revision History

Lineup : PCG-GRX590P
PCG-GRX590K
PCG-GRX590
PCG-GRX570P
PCG-GRX570K
PCG-GRX570
PCG-GRX550P
PCG-GRX550K
PCG-GRX550
PCG-GRX510P
PCG-GRX510K
PCG-GRX510



Illust : PCG-GRX590P

For American Area

*US Model
Canadian Model*



Confidential

- Design and specifications are subject to change without notice.

NOTEBOOK COMPUTER

SONY®

Information in this document is subject to change without notice.

Sony and VAIO are trademarks of Sony. Intel logo and Intel Inside logo are registered trademarks of Intel Corporation. Pentium MMX is a trademark of Intel Corporation. Microsoft, MS-DOS, Windows, the Windows 95 and Windows 98 logo are trademarks of Microsoft Corporation.

All other trademarks are trademarks or registered trademarks of their respective owners. Other trademarks and trade names may be used in this document to refer to the entities claiming the marks and names or their produces. Sony Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

Caution Markings for Lithium/Ion Battery - The following or similar texts shall be provided on battery pack of equipment or in both the operating and the service instructions.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

CAUTION: The battery pack used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

Dispose of used battery promptly.
Keep away from children.

CAUTION: Changing the back up battery.

- Overcharging, short circuiting, reverse charging, mutilation or incineration of the cells must be avoided to prevent one or more of the following occurrences; release of toxic materials, release of hydrogen and/or oxygen gas, rise in surface temperature.
- If a cell has leaked or vented, it should be replaced immediately while avoiding to touch it without any protection.



Service and Inspection Precautions

1. Obey precautionary markings and instructions

Labels and stamps on the cabinet, chassis, and components identify areas requiring special precautions. Be sure to observe these precautions, as well as all precautions listed in the operating manual and other associated documents.

2. Use designated parts only

The set's components possess important safety characteristics, such as noncombustibility and the ability to tolerate large voltages. Be sure that replacement parts possess the same safety characteristics as the originals. Also remember that the \triangle mark, which appears in circuit diagrams and parts lists, denotes components that have particularly important safety functions; be extra sure to use only the designated components.

3. Always follow the original design when mounting parts and routing wires

The original layout includes various safety features, such as inclusion of insulating materials (tubes and tape) and the mounting of parts above the printer board. In addition, internal wiring has been routed and clamped so as to keep it away from hot or high-voltage parts. When mounting parts or routing wires, therefore, be sure to duplicate the original layout.

4. Inspect after completing service

After servicing, inspect to make sure that all screws, components, and wiring have been returned to their original condition. Also check the area around the repair location to ensure that repair work has caused no damage, and confirm safety.

5. When replacing chip components...

Never reuse components. Also remember that the negative side of tantalum capacitors is easily damaged by heat.

6. When handling flexible print boards...

- The temperature of the soldering-iron tip should be about 270°C.
- Do not apply the tip more than three times to the same pattern.
- Handle patterns with care; never apply force.

Caution: Remember that hard disk drives are easily damaged by vibration. Always handle with care.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFÉS PAR UNE MARQUE \triangle SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

Confidential

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
CHAPTER 1. REMOVAL	1-1
		(to 1-1)
CHAPTER 2. SELF DIAGNOSTICS	2-1
		(to 2-1)
CHAPTER 3. BLOCK DIAGRAM	3-1
		(to 3-2)
CHAPTER 4. FRAME HARNESS DIAGRAM	4-1
		(to 4-2)
CHAPTER 5. EXPLODED VIEWS AND PARTS LIST	5-1
5-1. Main Section	5-3
5-2. LCD Section		
	(GRX570/GRX570K/GRX570P/GRX590/GRX590K/GRX590P) – Made by HI –	5-7
5-3. LCD Section		
	(GRX510/GRX510K/GRX510P/GRX550/GRX550K/GRX550P) – Made by HI –	5-9
		(to 5-10)

History of the changes is shown as the “Revision History” at the end of this data.

Confidential

ATTENTION

Please confirm disassembly method by “Repair Manual” which has been informed you separately.

CHAPTER 2.

SELF DIAGNOSTICS


ATTENTION

Please confirm “Self Diagnostics” method which will be informed you with distribution of “Self Diagnostics” software.

Confidential

CHAPTER 3. BLOCK DIAGRAM


PCG-GRX Series BLOCK DIAGRAM Rev.0.51

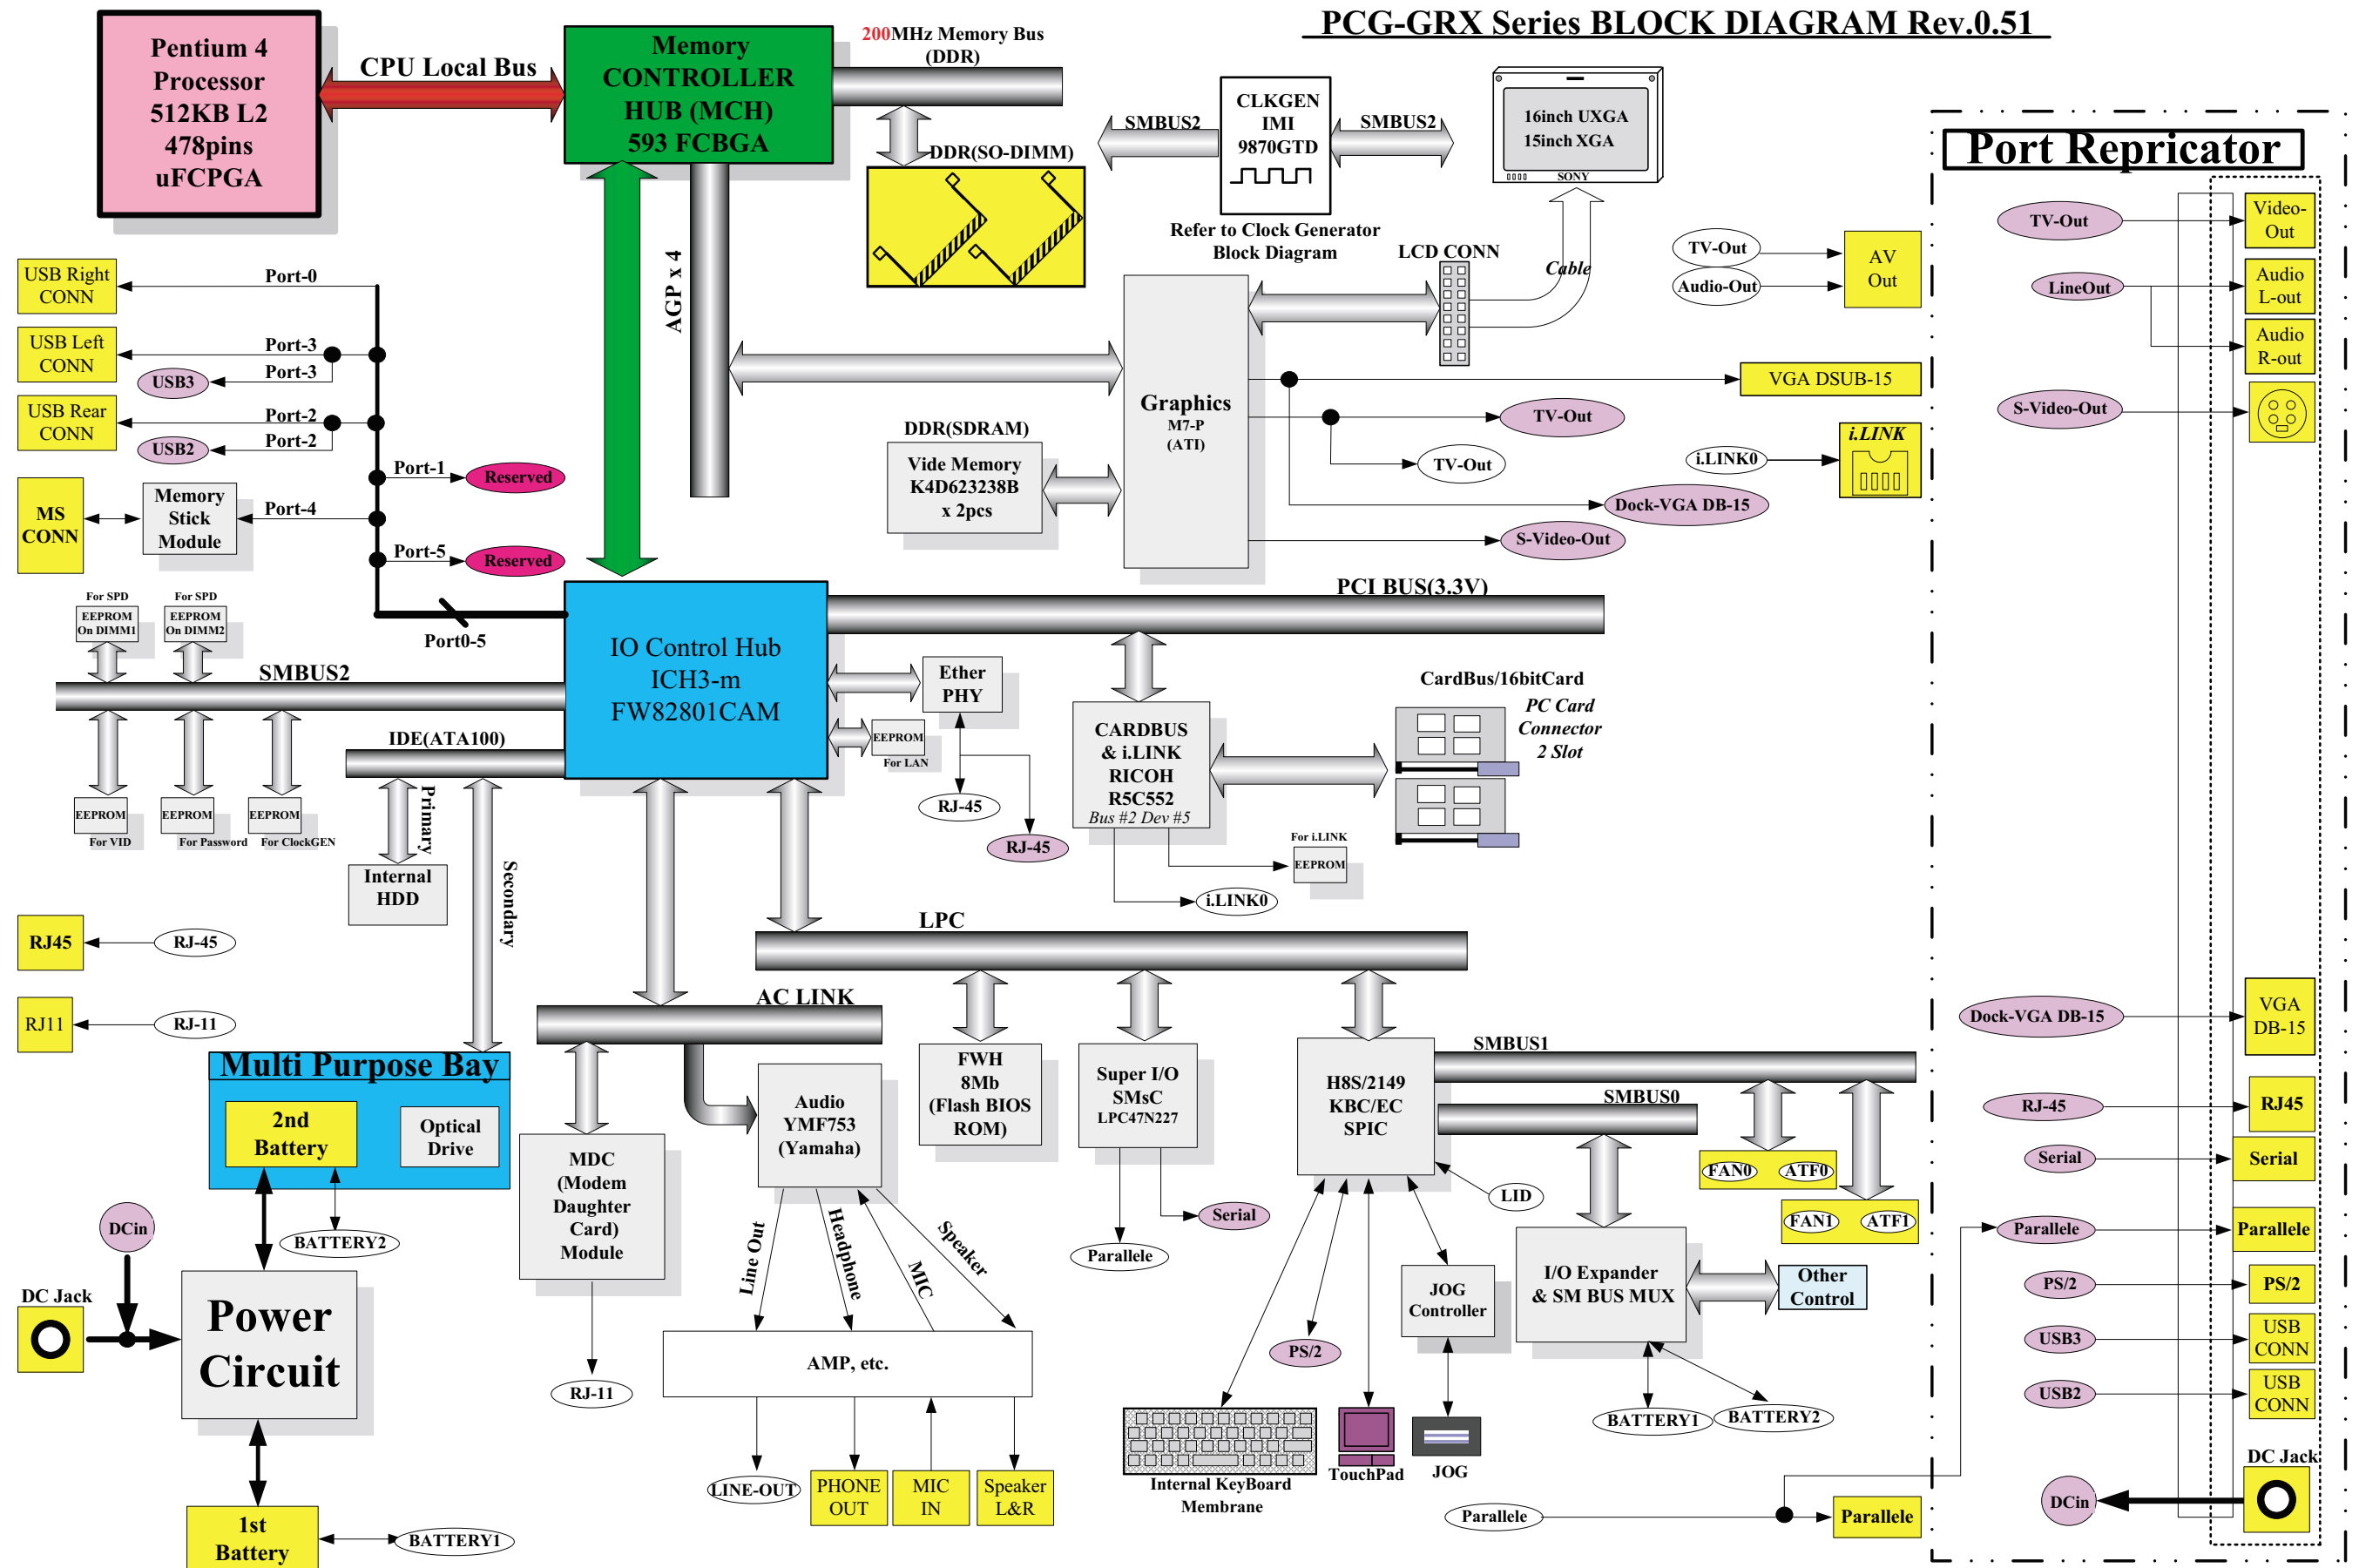

Confidential

CHAPTER 4.

FRAME HARNESS DIAGRAM

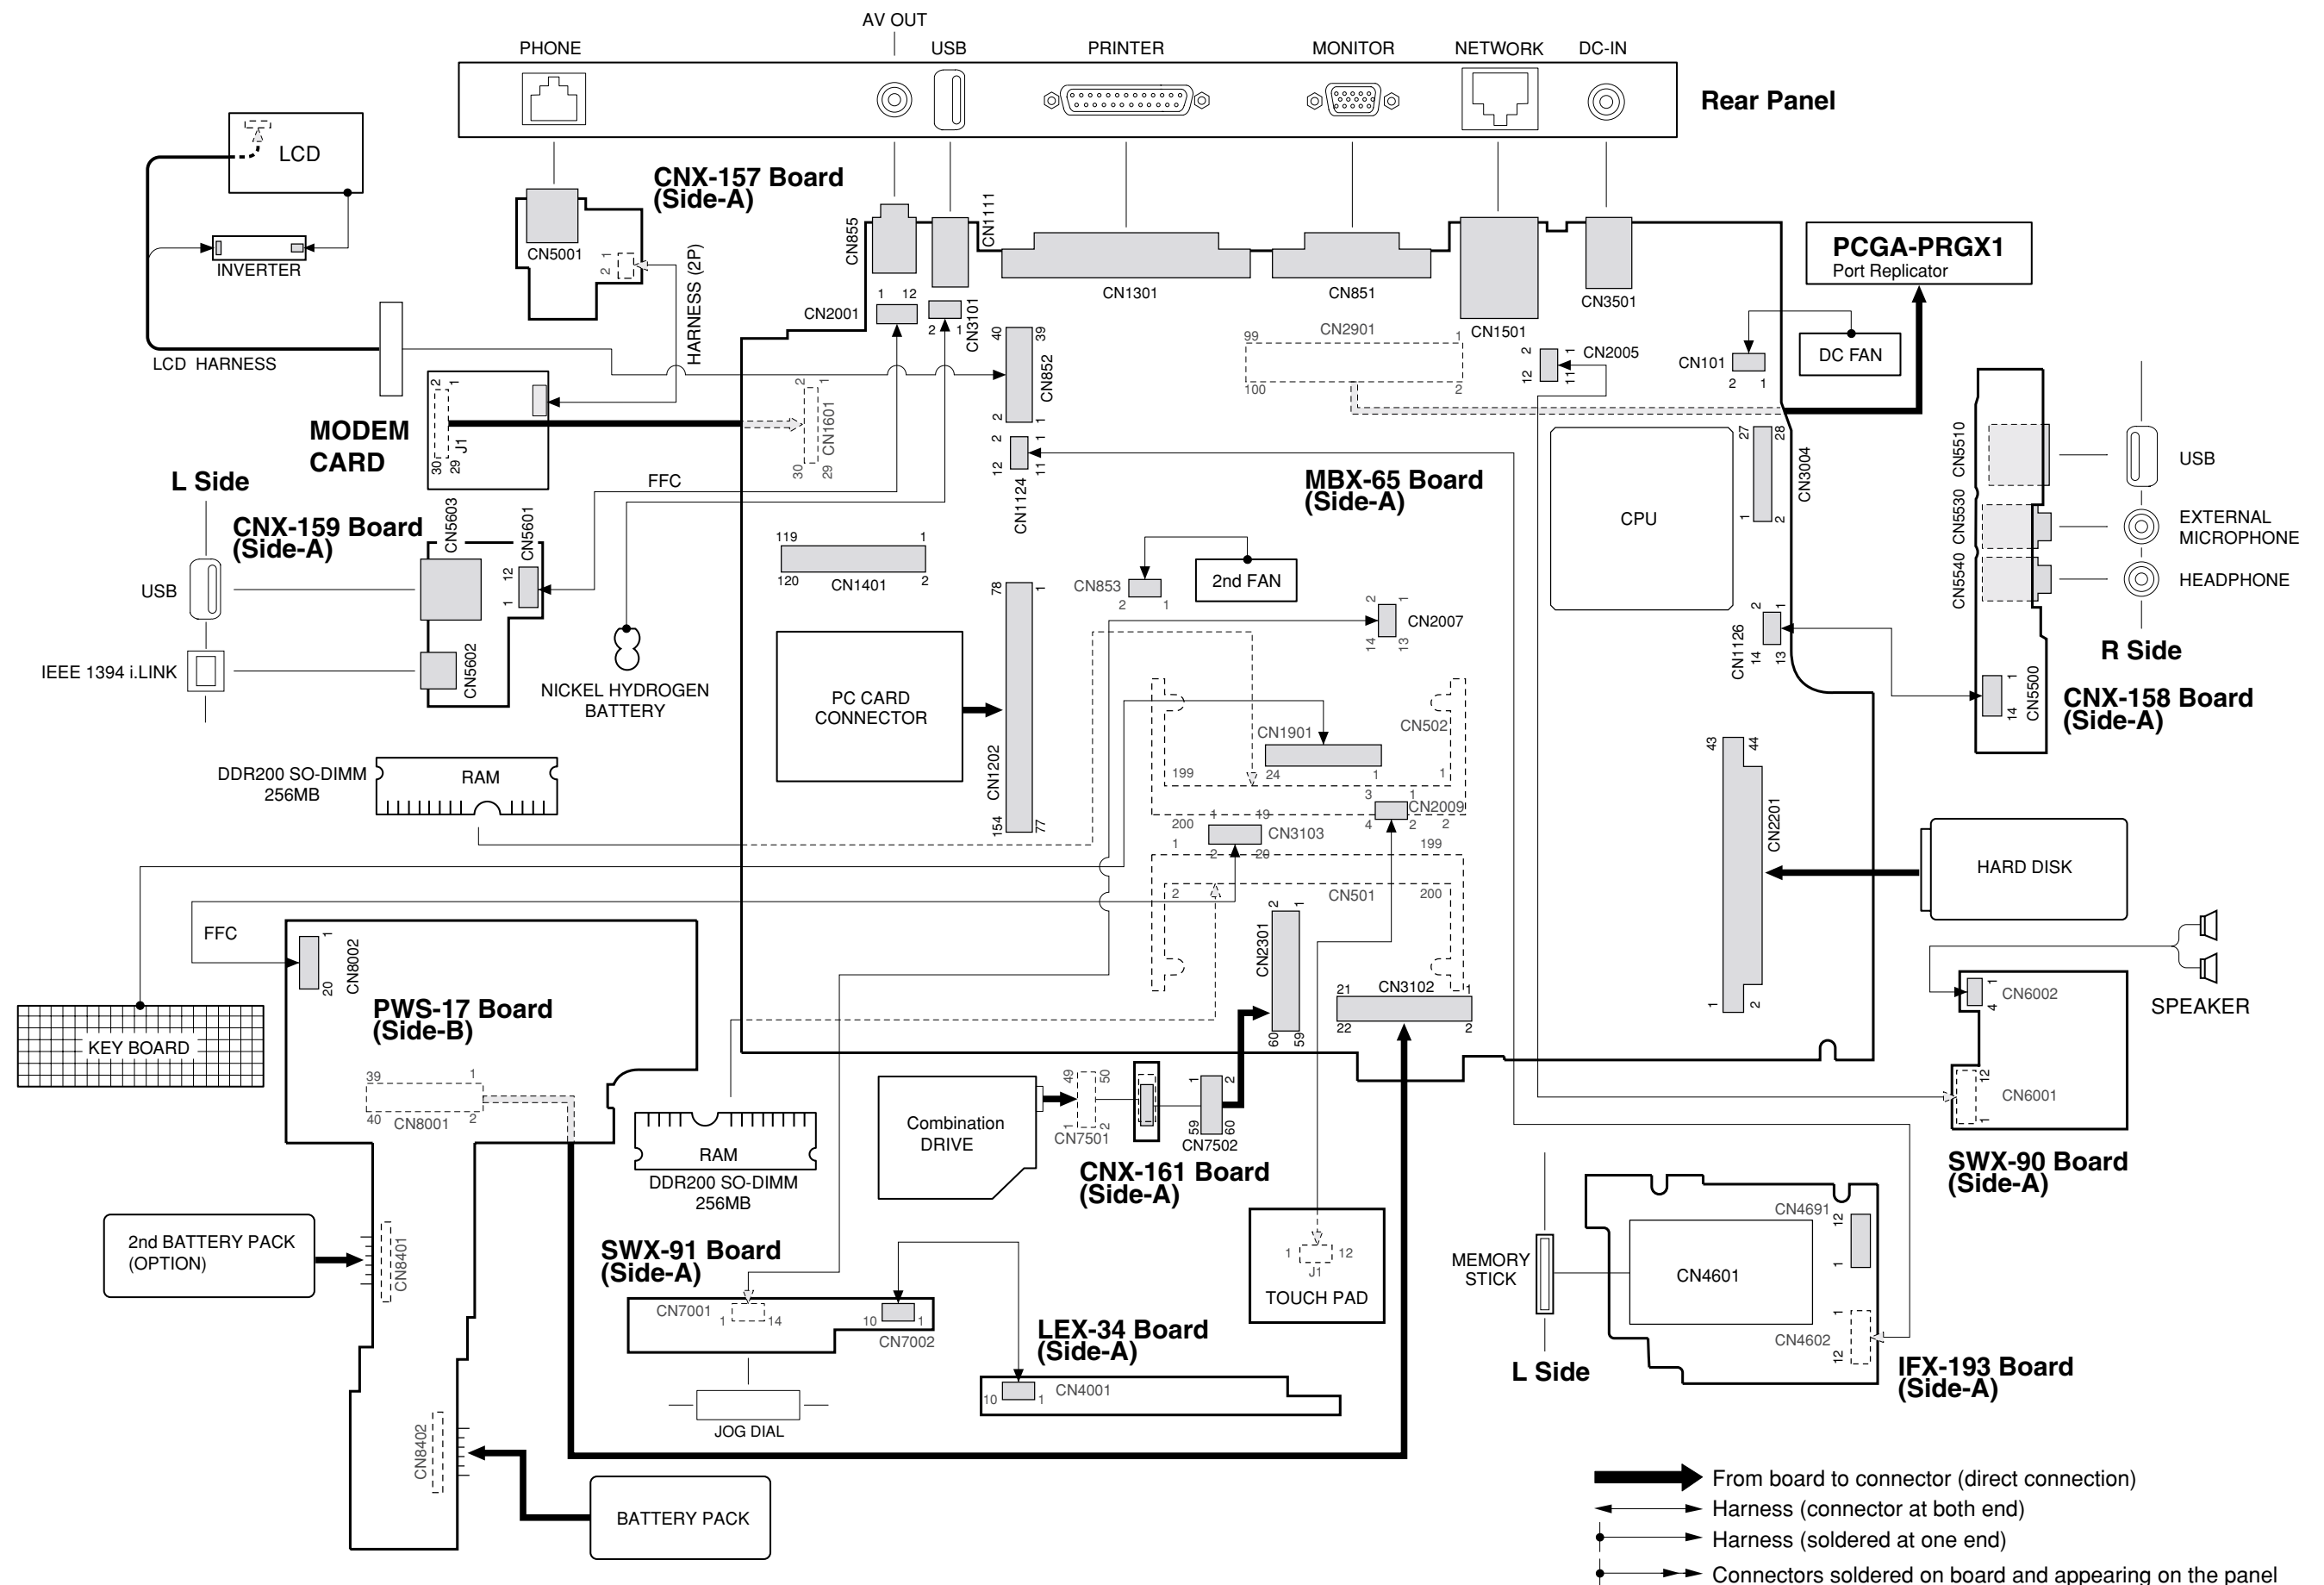


 
Confidential


CHAPTER 5.

EXPLODED VIEWS AND PARTS LIST

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked “ * ” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- When two or more parts are shown in parallel, use the part described first as the main part.
- The indication [CH] is used for identification of part type.
- Regarding the boards of this model, the discrete parts on the boards cannot be replaced. However, Some connectors can be replaced.

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

5-1. Main Section


Ref.No.	Part No.	Description
1	4-660-888-01	ESCUSHON TACHPAD
2	1-796-166-21	PAD, TOUCH
3	X-4624-531-1	ASSY PALMREST
4	4-660-904-01	CUSHION PALMREST
5	4-660-906-01	SPRING BLIND
6	4-660-906-11	SPRING BLIND
* 7	4-660-900-01	PLATE ARM LEFT
* 8	4-660-901-01	PLATE ARM RIGHT
9	1-761-518-11	PWB, FLEXIBLE PRINT
10	4-662-607-01	THERMAL SHEET FET
* 11	4-660-903-01	BRACKET TOUCHPAD
12	X-4624-620-2	ASSY BEZEL COMBO (CNC)
13	8-458-828-70	RW DRIVE CRX810E-VN
14	4-661-451-01	ADHESIVE TAPE TOUCHPAD
15	4-662-272-01	LAVEL COMBO DRIVE
16	4-654-837-01	SHEET BAY BOARD
17	A-8067-159-A	COMPLETE PWB CNX-161
18	4-660-860-02	CASE BAY
19	X-4624-533-2	ASSY PLATE KEYBOARD
20	X-4624-528-1	ASSY BRACKET BAY
21	1-823-721-11	CABLE, FLEXIBLE FLAT
22	4-661-289-01	INSULATOR PWS
23	A-8067-167-A	COMPLETE PWB PWS-17
24	1-815-594-21	CONNECTOR, PC CARD(EJECT,RIGHT)
25	4-660-831-01	INSULATOR PCMCIA
26	1-761-380-23	CARD, MODEM
27	1-761-519-11	PWB, FLEXIBLE PRINT
* 28	4-660-852-02	HEATSINK GHC
* 29	1-763-828-11	2ND FAN
30	4-660-836-01	THERMAL SHEET GHC
31	1-756-281-11	BATTERY, NICKEL HYDROGEN
32	4-642-711-01	SHEET (BATTERY), ADHESIVE
33	4-660-835-01	THERMAL SHEET CPU
34	6-702-112-01	(GRX590/GRX590K/GRX590P)... IC RH80532GC029512 (P4 1700MHz)
34	6-702-111-01	(GRX550/GRX550K/GRX550P/ GRX570/GRX570K/GRX570P)... IC RH80532GC025512 (P4 1600MHz)
34	6-702-109-01	(GRX510/GRX510K/GRX510P)... IC RH80532GC017512 (P4 1400MHz)
35	1-960-827-61	HARNES (2 PIN)
36	A-8067-165-A	COMPLETE PWB CNX-157
37	4-660-876-01	PLATE DC JACK
38	4-660-853-01	THERMAL FIN
* 39	1-763-829-11	CPU FAN
40	4-660-796-01	THERMAL SHEET COIL
41	4-660-445-02	BRACKET BATTERY
* 42	X-4624-936-1	ASSY SUB FRAME BOTTOM RIGHT
43	A-8067-163-A	COMPLETE PWB CNX-158
44	4-660-823-02	BRACKET DOOR R
45	4-661-272-02	INSULATOR BOARD AUDIO
* 46	4-660-905-01	HOLDER HDD
* 47	4-660-451-01	PLATE GND HDD
48	4-663-115-01	FOOT REAR FIXED
49	4-660-861-02	DOOR BATTERY
50	4-660-443-01	SPRING DOOR BATTERY
51	4-660-862-02	DOOR DIMM
* 52	4-660-447-01	SUB-FRAME BATTERY
53	A-8067-169-A	COMPLETE PWB LEX-34
* 54	X-4624-529-2	ASSY BRACKET IO
55	1-823-725-11	CABLE, FLEXIBLE FLAT
56	1-823-723-11	CABLE, FLEXIBLE FLAT
57	A-8067-171-A	COMPLETE PWB SWX-91
58	4-653-745-01	SPRING BAY

Ref.No.	Part No.	Description
59	4-659-630-02	LATCH BAY
60	X-4624-530-2	ASSY DOOR MODEM
61	4-661-288-01	INSULATOR DOOR MODEM
* 62	4-660-448-01	SUB-FRAME BAY
63	X-4624-538-2	ASSY DOOR L
64	4-660-822-02	BRACKET DOOR L
65	4-660-452-01	HINGE BASE LEFT
66	4-660-872-01	INSULATOR HEATSINK BOTTOM
67	A-8067-161-A	COMPLETE PWB CNX-159
68	4-660-544-02	CAP MODEM
69	4-660-864-02	DOOR IO
70	4-660-874-01	LABELIO
71	1-823-724-11	CABLE, FLEXIBLE FLAT
72	4-660-887-01	DISPLAY BASE
73	1-477-285-21	KEYBOARD UNIT (U)
74	X-4624-605-1	ASSY HOOD KEYBOARD
75	1-825-081-11	SPEAKER, (2.8CM) BOX WITH
76	1-823-719-11	CABLE, FLEXIBLE FLAT
77	A-8067-178-A	COMPLETE PWB IFX-193
78	1-823-720-11	CABLE, FLEXIBLE FLAT
79	A-8067-173-A	COMPLETE PWB SWX-90
80	A-8059-666-A	(GRX570/GRX570K/GRX570P/ GRX590/GRX590K/GRX590P)... ASSY HDD 40GB (T,20,F) (S)
80	A-8059-344-A	(GRX510/GRX510K/GRX510P/ GRX550/GRX550K/GRX550P)... ASSY HDD 30GB (T,20,F) (S)
* 81	4-653-799-02	BRACKET HDD
82	X-4624-536-2	ASSY DOOR HDD
83	4-653-801-02	SHEET HDD
84	X-4624-532-1	ASSY ESCUSHION JOG
85	X-4624-539-1	ASSY DOOR R
86	4-660-830-01	INSULATOR BAY
* 87	4-660-449-01	SUB-FRAME BOTTOM LEFT
88	6-600-080-01	IC M470L3224BT0-CB0 (DDR200 SO-DIMM 256MB)
89	4-662-961-01	SHEET BLIND L
90	4-654-953-01	SHEET PORT
91	4-662-926-01	INSULATOR HDD PWB
92	4-660-868-12	FOOT FRONT
93	X-4624-527-2	ASSY BOTTOM
94	4-660-866-02	DOOR PORT
95	4-662-798-01	PLATE GND PWS
96	A-8059-921-A	MBX-65 ASSY (S)
97	4-654-380-11	CAP BAY
98	4-664-333-01	CUSHEET DOOR R
99	4-664-547-01	SHEET FPC
100	4-664-632-01	SPACER K
101	4-664-678-01	SPACER J
105	4-664-561-01	ADHESIVE TAPE
110	1-793-365-11	CONNECTOR, USB (A)
111	1-793-162-11	JACK, SMALL TYPE
112	1-695-514-21	JACK (SMALL TYPE) 1P
113	1-779-745-21	JACK, DC
114	1-815-221-22	CONNECTOR, USB (A)
115	1-694-761-11	JACK, SMALL TYPE
116	1-794-548-11	CONNECTOR, USB (A)
117	4-662-984-01	INSULATOR DOOR DIMM
119	X-4624-855-2	ASSY DOOR DIMM
120	4-663-361-01	(GRX590P)...LABEL ID (U)
120	4-663-361-11	(GRX590K)...LABEL ID (U)
120	4-663-361-21	(GRX590)...LABEL ID (U)
120	4-663-361-31	(GRX570P)...LABEL ID (U)
120	4-663-361-41	(GRX570K)...LABEL ID (U)
120	4-663-361-51	(GRX570)...LABEL ID (U)

Ref.No.	Part No.	Description
120	4-663-361-91	(GRX550P)...LABEL ID (U)
120	4-663-392-01	(GRX550K)...LABEL ID (U)
120	4-663-392-11	(GRX550)...LABEL ID (U)
120	4-663-392-41	(GRX510P)...LABEL ID (U)
120	4-663-392-31	(GRX510K)...LABEL ID (U)
120	4-663-392-21	(GRX510)...LABEL ID (U)
121	4-663-828-01	SPACER PC CARD
122	4-663-827-01	CUSHION KEYBOARD
123	4-663-887-01	SHEET ATI
125	4-663-889-01	SHEET CU
126	4-663-230-02	CUSHION HOOD
127	4-663-227-01	CUSHION IO
128	4-664-048-01	INSULATOR FAN
129	4-664-308-01	SHEET JOG
130	4-664-286-01	SPACER R
131	4-664-285-01	CUSHION KEYBOARD R
132	4-661-644-01	SHEET, EYE CONVERTER
133	4-664-362-01	CUSHION IO LEFT
134	4-664-363-01	CUSHION SPRING BLIND R
135	4-664-482-01	SPACRER HINGE L
136	—————	FILAMENT TAPE (W12X30) (*1)

*1 Use the FILAMENT TAPE.


Ref.No.	Part No.	Description
B1	4-641-726-41	SCREW (M2), SPECIAL HEAD
B2	4-641-726-12	SCREW (M2), SPECIAL HEAD
B3	7-621-772-70	SCREW +B 2X14
B4	4-654-387-01	SCREW (MBX)
B5	4-641-656-12	SCREW (M2.5), 0 PLATE P
B6	4-656-703-01	SCREW M2
B7	4-635-301-01	SCREW M3X4
B8	4-639-112-01	SCREW M2X4
B9	4-635-966-01	SCREW (HEX)
B10	4-642-852-01	+B M2
B11	4-654-386-01	SPACER (PWS)
B12	7-622-205-05	NUT M2 TYPE2
B13	4-651-989-01	SPACER (MBX)
B14	4-661-248-01	SPACER 4MM
B15	4-641-726-81	SCREW (M2), SPECIAL HEAD
B16	4-654-811-01	SCREW M3
B17	4-657-192-01	SCREW, TAPPING, SPECIAL

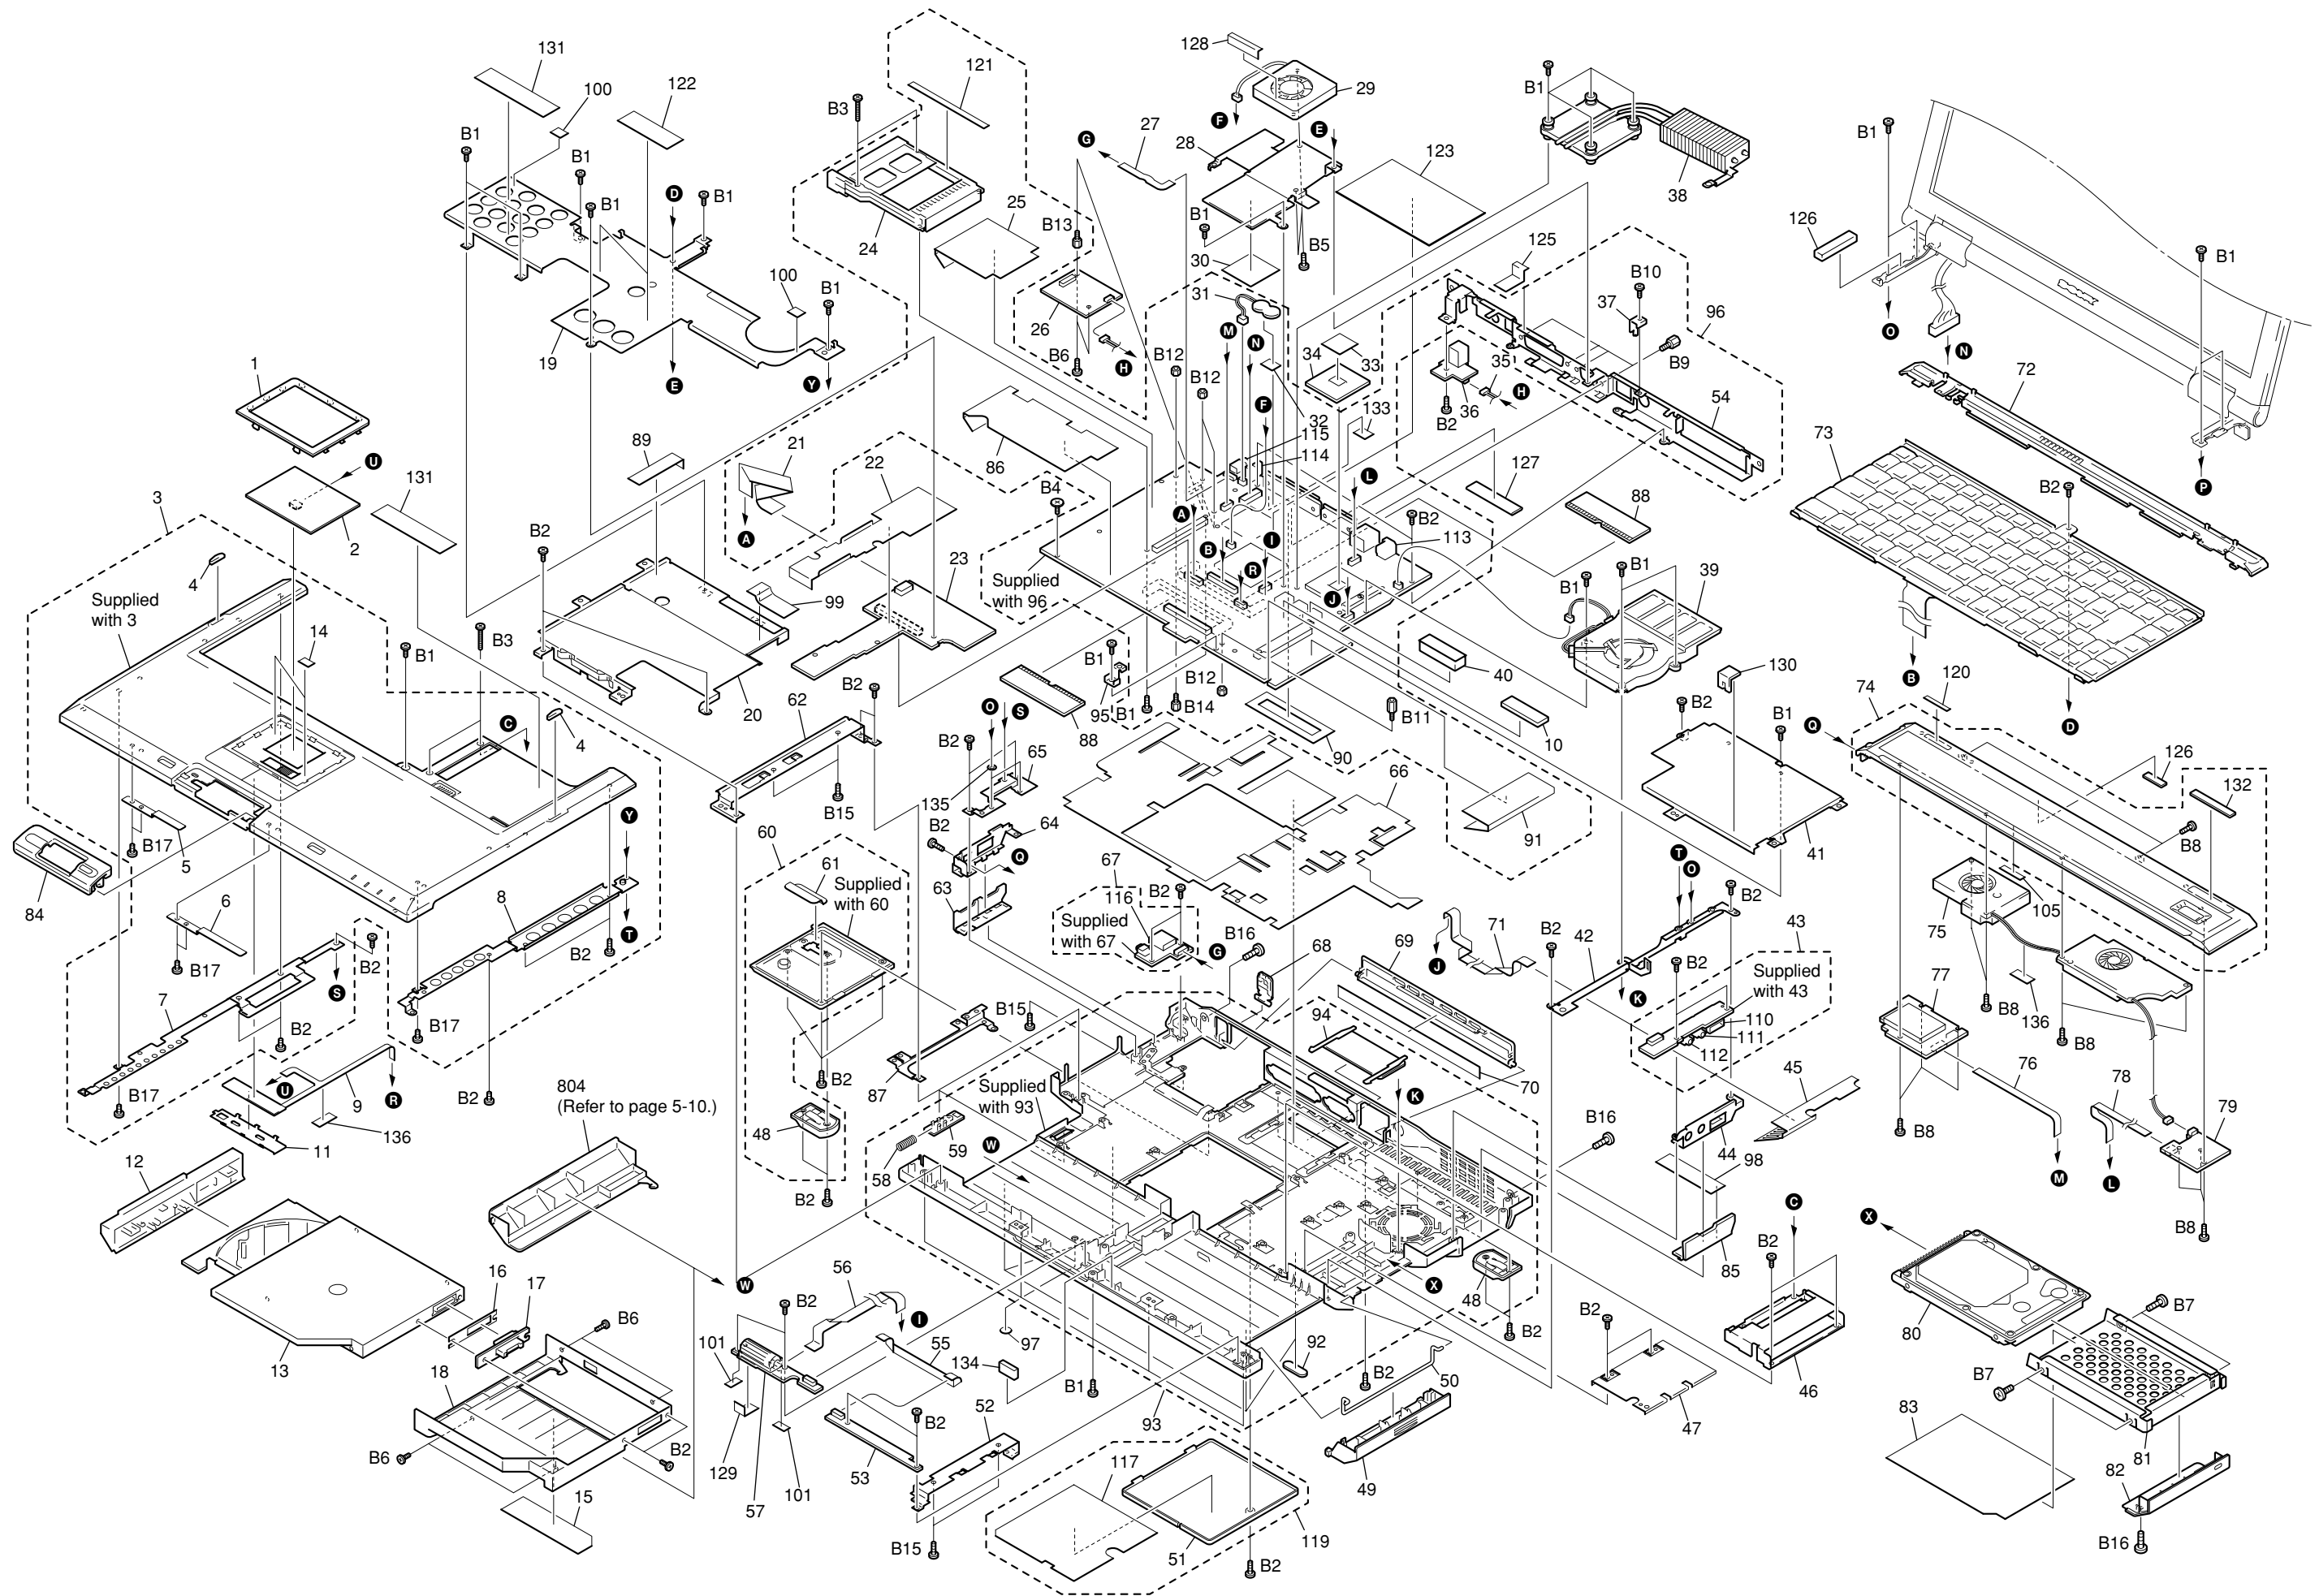

5-2. LCD Section

(GRX570/GRX570K/GRX570P/GRX590/GRX590K/GRX590P)

– Made by HI–

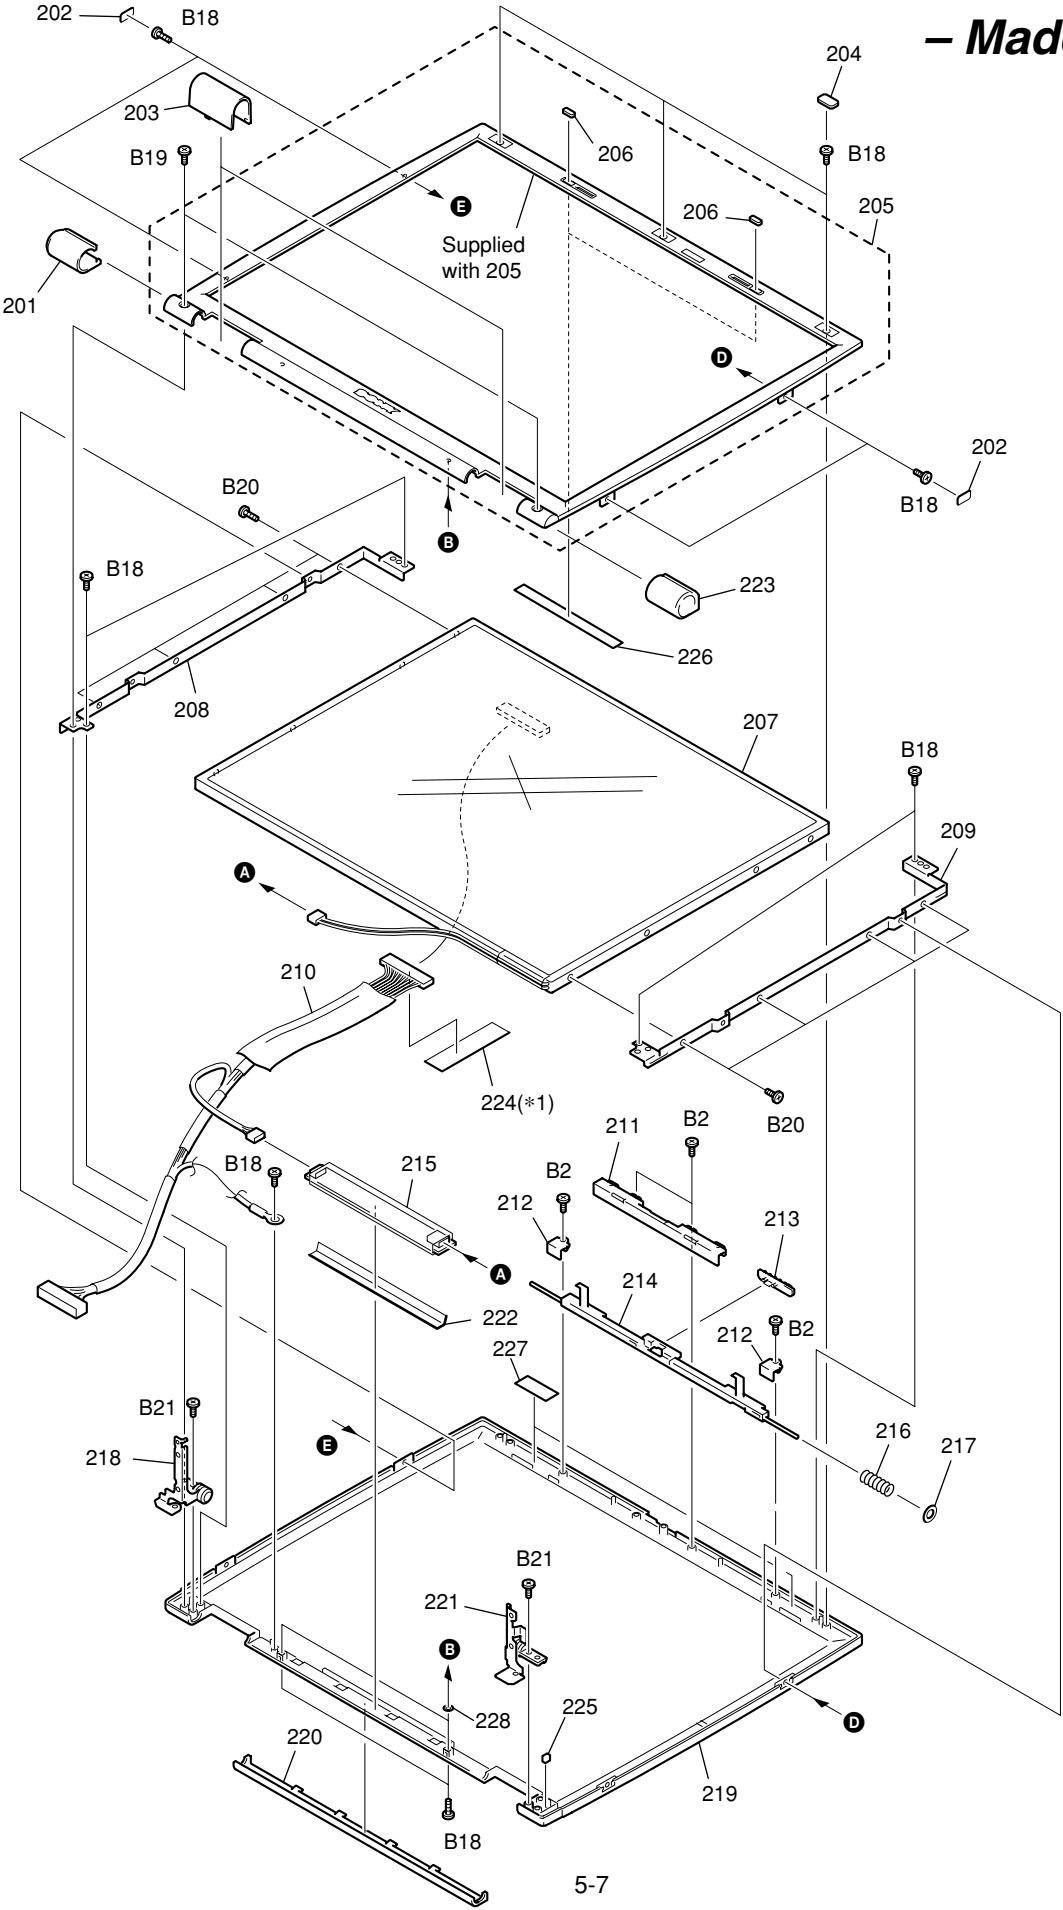

Ref.No.	Part No.	Description
201	4-660-847-01	CAP LCD L
202	4-660-851-01	LCD SCREW COVER S
203	4-660-897-01	COVER HINGE
204	4-660-850-01	LCD SCREW COVER T
205	X-4624-525-1	ASSY BEZEL
206	4-660-846-01	LATCH RUBBER
207	A-8059-922-A	ASSY LCD 16U (HI) (S)
* 208	4-660-839-02	BRACKET LCD L
* 209	4-660-840-02	BRACKET LCD R
210	1-961-573-11	HARNESS (LCD)
211	4-660-844-01	LATCH HOLDER LCD
212	4-660-828-01	LATCH GUIDE
213	4-660-907-01	LATCH BOTTON
214	4-660-843-02	LATCH LEVER
215	1-477-101-11	INVERTER UNIT
216	4-663-929-01	SPRING (LCD) (16)
217	4-663-477-01	SPACER LATCH
* 218	X-4624-534-2	ASSY HINGE L
219	X-4624-847-1	ASSY DISPLAY (F)
220	4-660-849-02	CAP LCD C
* 221	X-4624-535-2	ASSY HINGE R
222	4-662-783-01	INSULATOR INVERTER
223	4-660-848-01	CAP LCD R
224		FILAMENT TAPE (W19X50) (*1)
225	4-664-545-01	SPACER (HINGE) (16) (R)
226	4-664-314-01	SHEET (LCD) (BEZEL UP)
227	4-664-062-01	SHEET LCD LATCH
228	4-664-316-01	SHEET (LCD) (BOSS)

*1 Use the FILAMENT TAPE.

NOTE :


Set the DIP switch on the MBX-65 board (Main board) to match with the LCD that is used in this computer.

The upper position where ON indication is shown is the ON position . The lower position is the OFF position.

No.	1	2	3	4	5	6	7	8
ON/OFF	1	0	1	1	1	1	1	1
0 : ON 1: OFF								

Ref.No.	Part No.	Description
B2	4-641-726-12	SCREW (M2), SPECIAL HEAD
B18	4-645-214-61	GRIP, M2
B19	4-644-637-01	GRIP, M2 EG
B20	7-621-259-25	SCREW +P 2.6X4
B21	4-663-482-11	M2 SCREW (HARDENING)

5-3. LCD Section
(GRX510/GRX510K/GRX510P/GRX550/GRX550KGRX550P)
– Made by HI–

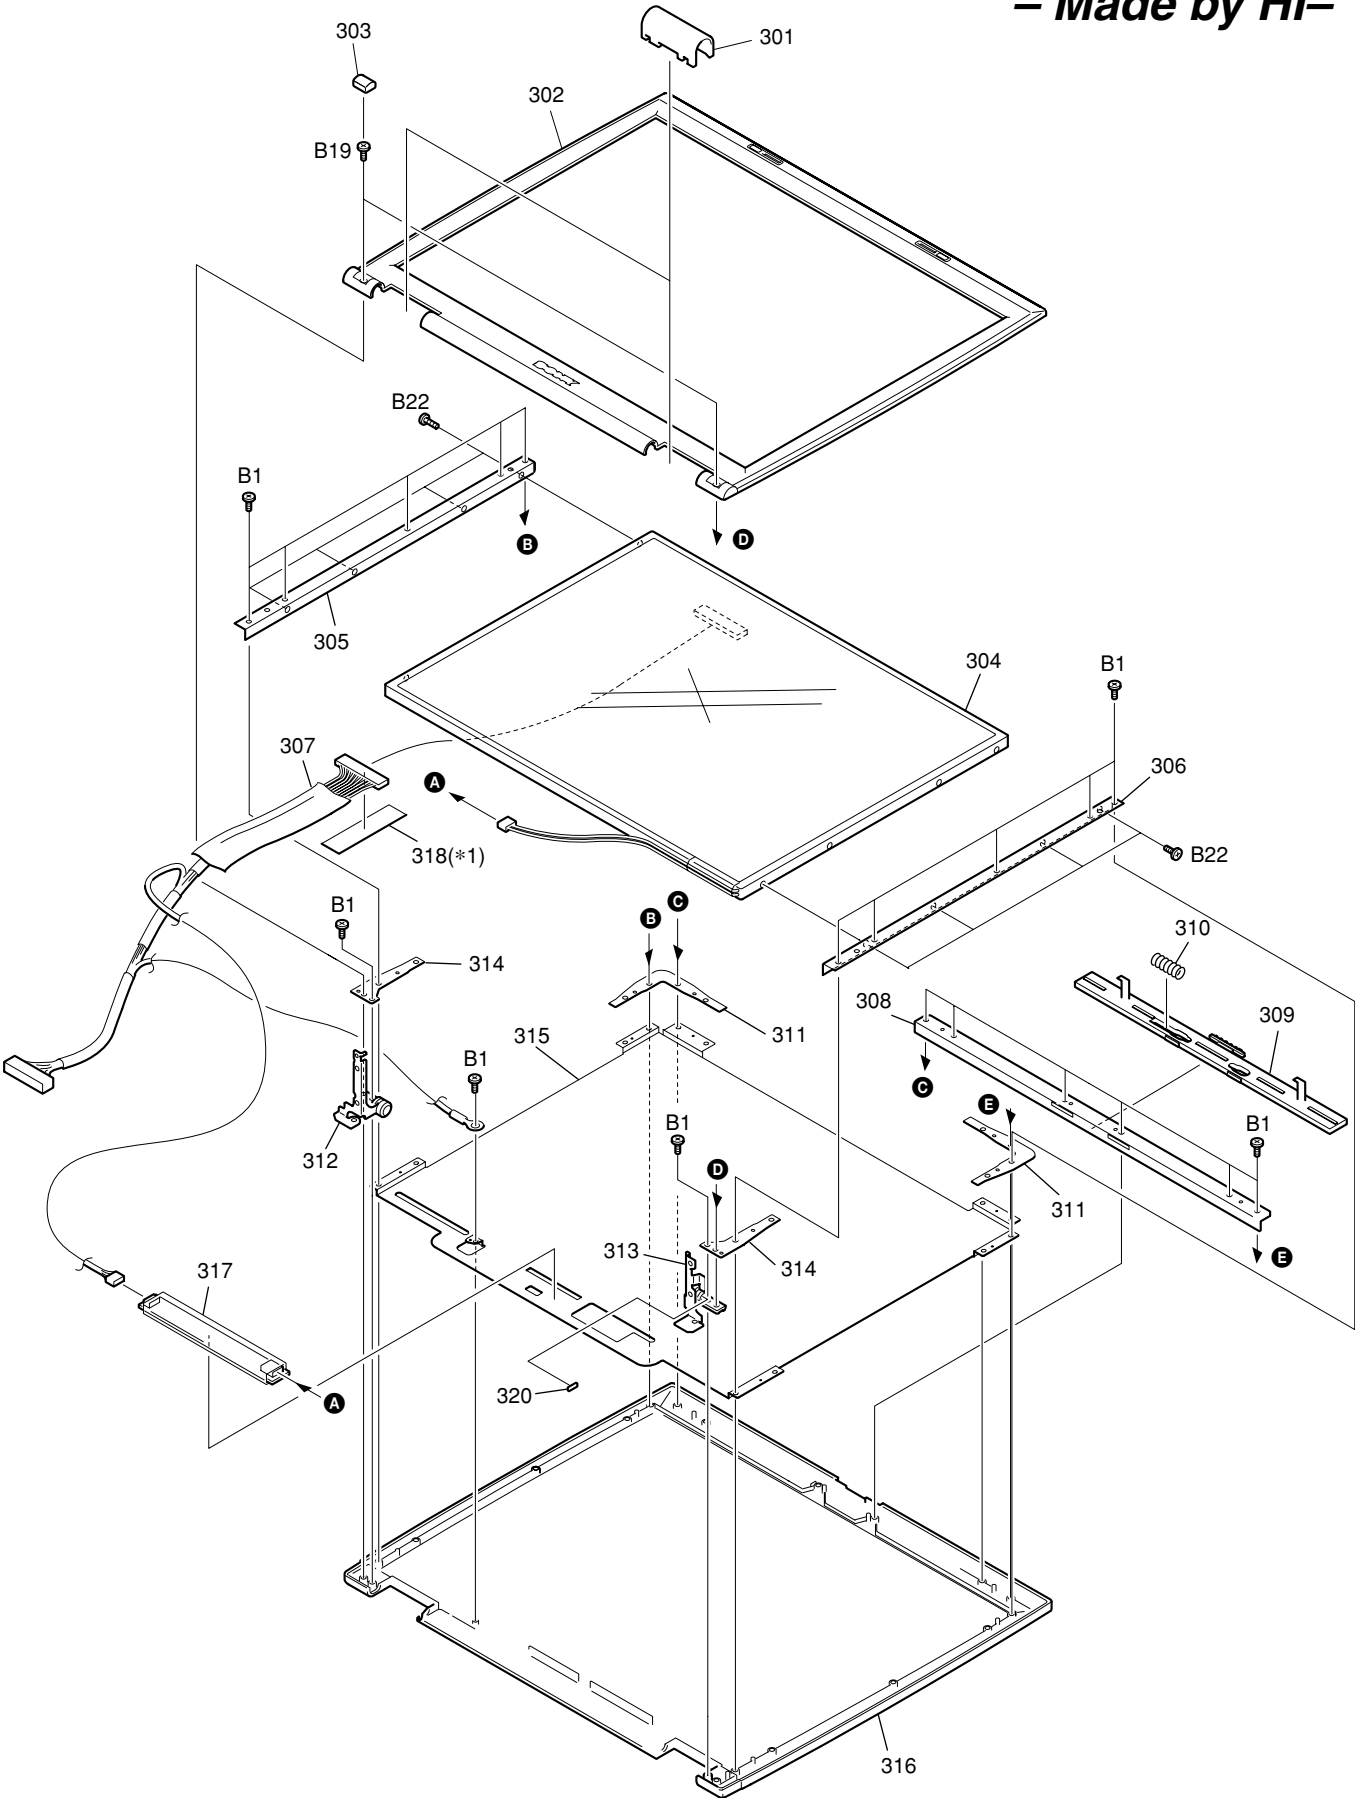


Ref.No.	Part No.	Description
301	4-660-897-01	COVER HINGE
302	X-4624-586-1	ASSY BEZEL DISPLAY 15
303	4-660-919-01	COVER SCREW LOWER 15
304	A-8110-283-A	ASSY LCD 15HI AP(S)
* 305	4-660-912-01	BRACKET LCD L 15
* 306	4-660-913-01	BRACKET LCD R 15
307	1-961-573-21	HARNESS (LCD)
* 308	4-660-914-01	BRACKET LCD UPPER 15
309	4-660-911-01	LATCH LEVER 15
310	4-653-745-01	SPRING BAY
* 311	4-660-916-01	PLATE LCD UPPER 15
* 312	X-4624-534-2	ASSY HINGE L 15
* 313	X-4624-535-2	ASSY HINGE R 15
* 314	4-660-915-01	PLATE LCD LOWER 15
315	4-660-918-01	SEALED LCD 15
316	X-4624-587-1	ASSY HOUSING DISPLAY 15
317	1-476-316-11	INVERTER UNIT
318		FILAMENT TAPE (W19X50) (*1)
320	4-664-546-01	SPACER (HINGE) (15) (R)
B1	4-641-726-41	SCREW (M2), SPECIAL HEAD
B19	4-644-637-01	GRIP, M2 EG
B22	4-641-726-81	SCREW (M2), SPECIAL HEAD

*1 Use the FILAMENT TAPE.

NOTE :

Set the DIP switch on the MBX-65 board (Main board) to match with the LCD that is used in this computer.

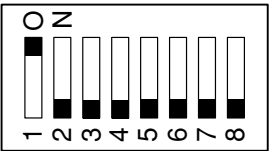


The upper position where ON indication is shown is the ON position . The lower position is the OFF position.


No.	1	2	3	4	5	6	7	8
ON/OFF	0	1	1	1	1	1	1	1
0 : ON 1: OFF								

Ref.No.	Part No.	Description
ACCESSORIES *****		
△ 801	1-477-206-11	ADAPTOR, AC
802	1-756-269-11	BATTERY, LITHIUM ION (PCGA-BP2NX)
△ 803	1-757-562-21	CORD, POWER
804	4-660-884-02	WEIGHT SAVER (Refer to page 5-5.)
	4-662-309-01	QUICK START, COORS
	4-662-303-01	SPECIFICATION SHEET, COORS
LOOK AT EXPLODED VIES OF THE PARTS *****		
805	A-8023-271-A	WIRELESS LAN PC CARD ASSY
806	X-4624-277-1	CASE ASSY, PC CARD


801
AC Adaptor (1)

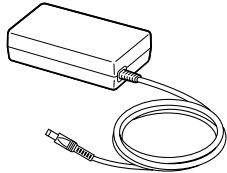


804
Weight Saver (1)

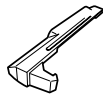


802
Battery Pack (1)

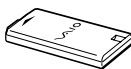


805
Wireless LAN PC Card (1)

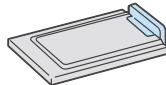

803
Power Cord (1)

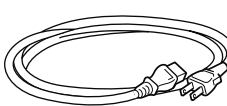

806
Wireless LAN
PC Card Case (1)

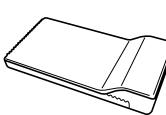

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Confidential




PCG-GRX510/GRX510K/GRX510P/GRX550/GRX550K/
PCG-GRX550P/GRX570/GRX570K/GRX570P/GRX590/
PCG-GRX590K/GRX590P (AM)

List of PCG-GRX Series (As of April, 2002)

Model Name	Service Manual Part No.
PCG-GRX550 PCG-GRX550K PCG-GRX550P PCG-GRX570 PCG-GRX570K PCG-GRX570P PCG-GRX590 PCG-GRX590K PCG-GRX590P PCG-GRX510 PCG-GRX510K PCG-GRX510P	9-874-524-02



 : Additional Models

This manual and the constituent data may not be replicated, copied nor reprinted in whole or in part without prior written authorization of Sony Corporation.

Revision History

Suffix	Ver.	Date	Contents	QM No.
-01	Ver. 1	2002.03.25	First Edition	
-02	Ver. 2	2002.04.23	Front Page (Model Line Up), Page 5-3, Page 5-4, Page 5-9, Back Cover	N2002_047K
< Remarks >				